

 
RTF2Writer Conversion Utility

Even if you don't have Stenograph's Case CATalyst® software, you can still enjoy instant translation of your written steno into text on the NexGen™, Luminex® II, Luminex or Diamante® writer's display screen. Simply create an RTF/CRE version of your personal dictionary and up to seven job dictionaries from your CAT software and use these instructions and the RTF2Writer utility provided on the Stenograph Writer Utility download. Please see your CAT software reference guide for creating RTF/CRE dictionaries.


If you use Case CATalyst you don't need the RTF2Writer utility. From anywhere in Case CATalyst, press Alt + u, x (Functions/Export), to begin the export process. See Case CATalyst Help for full instructions.

To use the RTF2Writer Utility via a USB cable, follow these instructions:

1. Turn your NexGen™, Luminex II, Luminex or Diamante **On**.
2. Plug the USB cable into your computer's USB port and the other end of the USB cable into the writing machine's USB port. If the writing machine's device driver is not loaded, follow the instructions in the User Guide to install the driver.
3. On your computer, navigate to the location where you downloaded and installed the Stenograph Writer Utility files. At the Stenograph Writer Utility dialog, click the Utility button, double click the Utilities and Splash Photos folder and then double click the RTF2Writer.exe to start the utility.

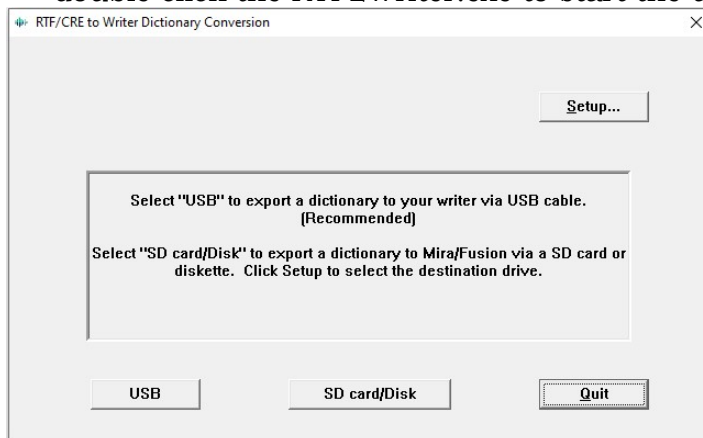


4. To select a dictionary in a RTF-CRE format select **USB**. The Select Personal and Job Dictionaries dialog box displays.

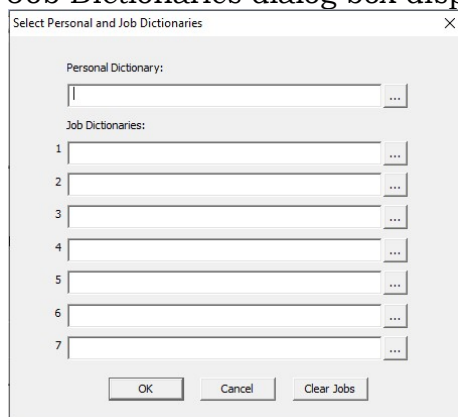

RTF2Writer Conversion Utility

- Click the **Browse** button (...) to navigate to the location where the RTF/CRE personal dictionary is stored. Do the same for any relevant RTF/CRE job dictionaries. While you can select up to seven job dictionaries, the total number of dictionary entries that can be loaded into the NexGen™, Luminex II, Luminex and Diamante is approximately 900,000 entries.

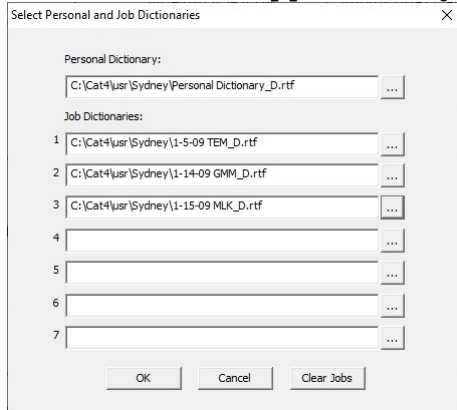

- Click **OK**.
- The Export Writer Dictionaries screen will display progress.



- When the dictionaries are sent, the RTF/CRE to Writer Dictionary Conversion dialog box displays.
- Click **Quit**, to close the dialog box.
- To see your translation displayed on your writer, begin writing on the keyboard.

Note: Updating via USB cable is the only way to load dictionaries on your NexGen™, Luminex II, Luminex and Diamante writing machines.